

HOW TO MEASURE FRENCH DOOR OR DOOR PANEL CURTAINS

INSIDE/RECESS MOUNT


Width – measure the width of the glass.

Length – measure the length of the glass.

SheerLace Curtain Company will calculate the correct width and length to cover your inside mounted door panel window.

** ½ of an inch space is required between your window glass and the outer edge of your window molding. This allows enough space for a tension rod to press against the vertical edge of the window.

All inside mounted door panel curtains come with a pair of spring tension rods which push against the inside of the molding edge to hold the curtain in place.

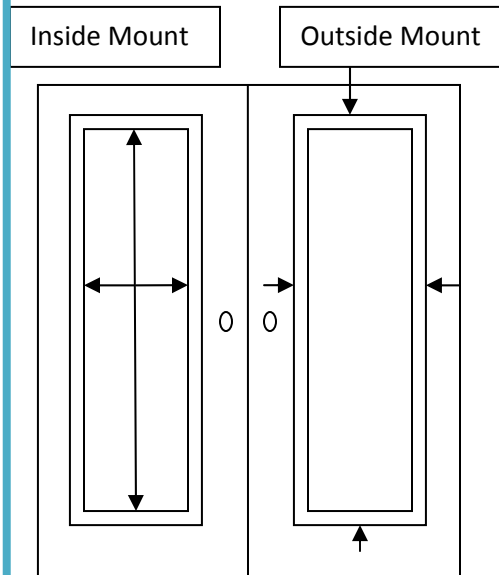

OUTSIDE MOUNT

Width – measure from left outside window molding across to right outside window molding.

Length – measure from top of outside window molding to bottom of outside window molding.

SheerLace Curtain Company will calculate the correct width and length to cover your outside mounted door panel window.

** All outside mounted door panel curtains come with a pair of sash rods. Magnetic rods and café rods may be ordered separately instead of sash rods for an additional fee.

Return